

Commands

General command frames			
Command Id	Command Name	M/O	Direction
0x00	Read Attributes	M	client->server
0x02	Write Attribute	M	client->server
0x06	Configure Reporting	O	client->server
0x08	Read Reporting Configuration	O	client->server
0x0A	Report Attributes	O	server->client
0x0C	Discover Attributes	O	client->server
Basic Cluster (0x0000)			
Command Id	Command Name	M/O	Direction
-> no commands are received or generated			
Power Configuration Cluster (0x0001)			
Command Id	Command Name	M/O	Direction
-> no commands are received or generated			
Identify Cluster (0x0003)			
Command Id	Command Name	M/O	Direction
0x00	Identify	M	client->server
0x01	Identify Query	M	client->server
0x00	Identify Time Query Response	M	server->client
Time Server Cluster(0x000A)			
Command Id	Command Name	M/O	Direction
-> no commands are received or generated			
OTA Update Cluster (0x0019)			
Command Id	Command Name	M/O	Direction
0x00	Image Notify	M	server->client

0x01	Query Next Image Request	M	client->server
0x02	Query Next Image Response	M	server->client
0x03	Image Block Request	M	client->server
0x05	Image Block Response	M	server->client
0x06	Upgrade End Request	M	client->server
0x07	Upgrade End Response	M	server->client
Poll control Cluster (0x0020)			
Command Id	Command Name	M/O	Direction
0x00	Check in	M	server->client
0x00	Check in Response	M	client->server
0x01	Fast Poll Stop	M	client->server
Thermostat Cluster (0x0201)			
Command Id	Command Name	M/O	Direction
0x00	Setpoint Raise/Lower	M	client->server
Thermostat User Interface Cluster (0x0204)			
Command Id	Command Name	M/O	Direction
-> no commands are received or generated			
Diagnostics Cluster (0x0B05)			
Command Id	Command Name	M/O	Direction
-> no commands are received or generated			